


## B&D 4333A, 4335A, 059116, Chamberlain 4333A, 4335A, Lift Master Coding Instructions



### Adding Remotes

1. Press and hold the selected remote push button you wish to open the door.

2. Press and release the orange or green "learn" button (1) on the opener panel. The opener light will flash once. Release the remote push button. If no light bulb is installed, two clicks will be heard.

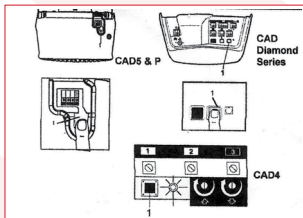

*If you release the remote control push button before the opener light flashes, the opener has not accepted the code.*