

 
B&D MPC2 Coding Instructions





FROM THE STREET LOOKING IN

Go to the left hand garage door opener & locate the control panel on the wall - Using a small screw driver to remove the cover off of the lower part of the panel (Fig 1). Look for the button that says CODE SET (Fig 2).



PRESS - CODE SET button once & the light will turn on (Fig 3) to indicate the receiver is ready to be re-programmed. PRESS - BUTTON A on the new remote for 5 seconds, the indicator light on the CODE SET button will turn off indicating the remote has been programmed

If you have more than one door - REPEAT on the right hand door opener using BUTTON B - if remotes are supplied as a matching pair - only one remote needs to be coded. BUTTONS A & C will control door 1 & BUTTONS B&D will control door 2. EXISTING remotes can be recoded to match the code of the new remotes.

YOUR NEW REMOTE CODES ARE:

BUTTONS A&C 3.4.7.9 Plus 1,2,5,6,8 Minus

BUTTONS B&D 1,2,3,4,7,9 Plus 5,6,8 Minus

The sample in Fig 4 Shows 1,5,6,8 are in the Plus position & 2,3,4,7,9 are in the Minus position

