


B&D MPC3 Coding Instructions




FROM THE STREET LOOKING IN
Go to the left hand garage door opener & locate the control panel on the wall - Using a small screw driver to remove the cover off of the lower part of the panel (Fig 1). Look for the button that says CODE SET (Fig 2).

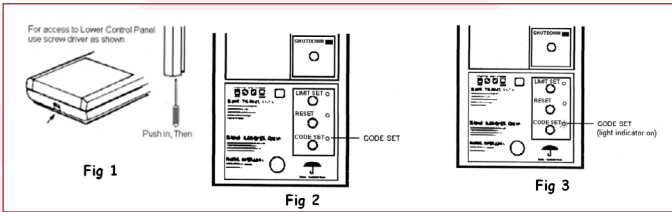

YOUR NEW REMOTE CODES ARE:

BUTTONS A&C
1,2,4,7 Plus
8 Middle
3,5,6 Minus
SIDE SLIDE SWITCH UP POSITION

BUTTONS B&D
1,2,4,7 Plus
8 Middle
3,5,6 Minus
SIDE SLIDE SWITCH DOWN POSITION

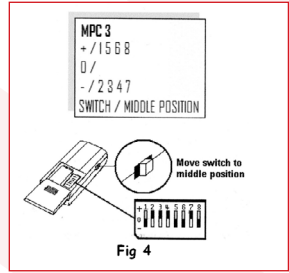

PRESS - CODE SET button once & the light will turn on (Fig 3) to indicate the receiver is ready to be re-programmed. **PRESS - BUTTON A** on the new remote for 5 seconds, the indicator light on the CODE SET button will turn off indicating the remote has been programmed

The sample in Fig 4 Shows 1,5,6,8 are in the Plus position & 2,3,4,7 are in the Minus position SIDE SWITCH IS IN THE MIDDLE POSITION

If you have more than one door - **REPEAT** on the right hand door opener using **BUTTON B** - if remotes are supplied as a matching pair - only one remote needs to be coded. **BUTTONS A & C** will control door 1 & **BUTTONS B&D** will control door 2. **EXISTING** remotes can be recoded to match the code of the new remotes.