

Door Mate, Tilt-a-matic, TRV, TRG Coding Instructions

Operation

To open a door or gate using this remote simply press the button for one or two seconds. Each press of the button will cycle through open, stop or close states.

Coding Remotes

Please make sure to install the battery in the transmitter correctly.



- 1) Open the new remote by pulling apart at the key chain connection point.
- 2) Open the existing remote battery cover
- 3) Making sure not to change the switches notate the sequence of ON & OFF.
- 4) Duplicate this sequence into the new remote
- 5) Close both remotes & test
- 6) Attach new remote to a keychain or use self adhesive Velcro spots to install a vehicle.