


Gliderol TM27 Coding Instructions



The receiver features 4 separate channels which allows four separate handsets (transmitters) to operate

1) Remove Cover

Open Control box by removing screws and carefully remove by tilting cover from bottom

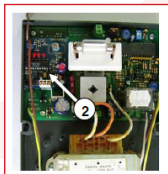


2) Locate receiver board

Receiver board is located in the upper left region of the main circuit board.

The receiver is identified by the brown antenna wire attached

3) Press Learn Button

Red LED #1 will illuminate representing channel 1.

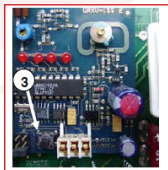

To select an alternate channel press Learn button until desired LED is illuminated (ie: press twice for channel 2; press four times for channel 4)

4) Press the button on the handset

All four LED's on receiver will flash to confirm that the handset has been successfully programmed.

Carefully replace cover and affix with screw



Note: Additional remotes must be programmed to separate channels.