




## Gliderol TM305C Coding Instructions


Each standard receiver can be configured to accept codes from ten separate handset units

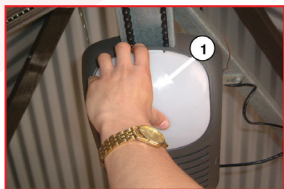

1) Carefully remove the light cover by pulling down on tab near front of unit


2) Press the learn button once (located on receiver board as shown)

- A red light will illuminate

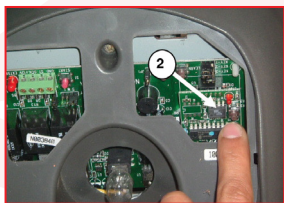

3) Press large button on the handset once and hold until red-light on receiver board turns off


- This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

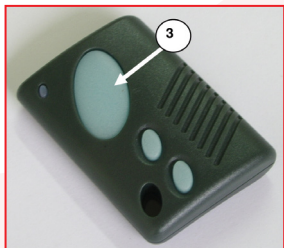

**Note:** To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.

## Gliderol TM305C Coding Instructions


Each standard receiver can be configured to accept codes from ten separate handset units

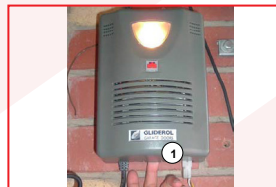

1) Carefully remove the light cover by pulling down on tab near front of unit


2) Press receiver button once (located on receiver board top left corner of control box)

- A red light will illuminate

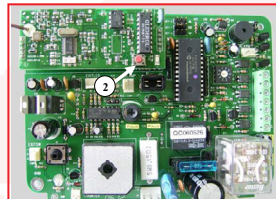

3) Press large button on the handset once and hold until red-light on receiver board turns off

- This confirms that the handset is programmed (Always use the large button for coding, even if configured to use small buttons for normal operation)

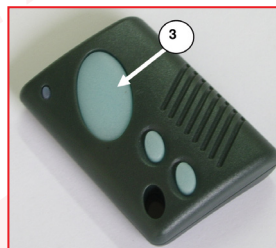

**Note:** To reset the receiver press and hold the learn button (2.) for 12 seconds. This will erase all handsets from the memory. This is recommended if a remote has been lost or stolen. Any other handsets previously used will need to be reprogrammed by following steps 1, 2 and 3 above.