

## Avanti & Centurion Coding Instructions



### Remotes

The 433MHz code hopping remote provides state of the art security by providing up to 1.2 billion possible code combinations. A new digital code is generated each time the button is pressed thereby ensuring the total security of your garage and its contents from potential coded scanning devices.

Up to 12 individual Hand Transmitter codes may be stored.

### Code Learning

Remotes may be coded as follows;

1. Hinge open the Courtesy Lamp Cover to expose the "Learn" Button.
2. Locate one of the Hand Transmitters supplied with the opener
3. Momentarily press the "Learn" Button (\* LED Indicator will glow solid)

4. Momentarily press the Remote button you want to control the door - LED indicator will extinguish
5. Momentarily press the same Remote button again - LED indicator will begin to flash rapidly, programming is complete once the LED Indicator ceases to flash
6. Close the Courtesy Lamp Cover

### Code Deleting

All Remote codes may be deleted as follows;

1. Hinge open the Courtesy Lamp Cover to expose the "Learn" Button
2. Momentarily press the "Learn" Button - LED indicator will glow solid
3. Press and hold the black "Run" Button - LED indicator will begin to flash rapidly
4. All Remote Codes will have been deleted once the LED Indicator ceases to flash
5. Close the Courtesy Lamp Cover

### Battery Replacement

Battery may be replaced as follows;

1. Remove the fixing screw located under the sticker on the bottom face of the Remote
2. Open the 2 halves of the Remote and replace the battery with one of identical specification
3. Test that the Remote LED Indicator illuminates when one of the Hand Transmitter buttons is pressed and then replace the fixing screw and sticker