

## BFT MITTO Coding Instructions

### BFT REMOTE - CODING VIA RECEIVER

**PLEASE NOTE:** At least one Remote must be already coded to device.



- Find Jumper J5 on receiver board and make sure it is set to off
- Press SW1 momentary
- Press hidden switch on back of already coded remote with a pin
- Push the button on the new remote you want to open the device.

Repeat for as many Remotes required - Turn power off & back on – Leave J5 jumper off.

### BFT REMOTE CODING VIA EXISTING REMOTE

- Locate a Remote already coded to device.
- Be within 3m of the gate control box.
- Original Remote - Press hidden button on back of Remote with a pin
- Original Remote - Momentarily press button that opens device
- New Remote - Press hidden button on new transmitter

- New Remote - Press button you want to operate device
- Repeat for as many Remotes required. Turn power off & back on – Coding Complete

### ADDENDUM

New BFT Mitto 2 transmitters have been modified.

There is no hidden button.

BFT MITTO 2&4 - Press both buttons 1&2 at the same time

### BFT MITTO TX-B COMPATIBLE

SECRET SWITCH - Press both buttons 1&4 at the same time.

LOCK - Press both buttons 1&2 until LED flashes

UNLOCK – Press both buttons 3&4 until LED flashes

**Note:** Some equipment supplied by selected stockists may be totally electronically programmed. The receiver will only pair with transmitters that have been coded with this device. If you cannot code the remotes, then they must be programmed by a BFT supplier using a special computer based programming tool.